



Microwave Oven  
INSTRUCTION MANUAL

**Model:EW925EAB**

**Read these instructions carefully before using your microwave oven.**

**SAVE THESE INSTRUCTIONS**

## PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

- (a) Do not attempt to operate this oven with the door open since this can result in harmful exposure to microwave energy. It is important not to break or tamper with the safety interlocks.
- (b) Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- (c) **WARNING:** If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.

### IMPORTANT!

If the Microwave oven is not maintained in a good state of cleanliness, its surface could be degraded and affect the lifespan of the Microwave oven and become electrically unsafe.

### Specifications

Model:	EW925EAB
Rated Voltage:	230-240V/ 50Hz
Rated Input Power(Microwave):	1450-1500 W
Rated Output Power(Microwave):	900 W
Rated Input Power(Grill):	1300-1400W
Rated Input Power(Convection):	2250-2400W
Oven Capacity:	25 L
Turntable Diameter:	Ø 315 mm
External Dimensions:	513X437X305mm
Net Weight:	Approx. 16.82Kg

# IMPORTANT SAFETY INSTRUCTIONS

## WARNING

To reduce the risk of fire, electric shock, injury to persons or exposure to excessive microwave oven energy when using your appliance, follow basic precautions, including the following:

1. **Warning** : Liquids and other foods must not be heated in sealed containers since they are liable to explode.
2. **Warning** : It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.
3. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.  
Cleaning and user maintenance should not be made by children unless they are supervised.  
Children should not play with the appliance .
4. Keep the appliance and its cord out of reach of children.
5. Only use utensils suitable for use in microwave ovens.
6. The oven should be cleaned regularly and any food deposits should be removed.
7. Read and follow the specific:"PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY".
8. When heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignition.

9. If smoke is emitted, switch off or unplug the appliance and keep the door closed in order to contain any flames.
10. Do not overcook food.
11. Do not use the oven cavity for storage purposes. Do not store items, such as bread, cookies, etc. inside the oven.
12. Remove wire twist-ties and metal handles from paper or plastic containers/bags before placing them in the oven.
13. Install or locate this oven only in accordance with the installation instructions provided.
14. Eggs in the shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode, even after microwave heating has ended.
15. This appliance is intended to be used in household and similar applications such as:
  - staff kitchen areas in shops, offices and other working environments;
  - by clients in hotels, motels and other residential type environments;
  - farm houses;
  - bed and breakfast type environments.
16. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
17. Do not store or use this appliance outdoors.
18. Do not use this oven near water, in a wet basement or near a swimming pool.
19. The temperature of accessible surfaces may be high when the appliance is operating. The surfaces are liable to get hot during use. Keep cord away from heated surface, and do not cover any vents on the oven.
20. Do not let cord hang over edge of table or counter.

21. Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and become electrically unsafe.
22. The contents of feeding bottles and baby food jars shall be stirred or shaken and the temperature checked before consumption, in order to avoid burns.
23. Microwave heating of beverages can result in delayed eruptive boiling, therefore care must be taken when handling the container.
24. The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
25. Children should be supervised to ensure that they do not play with the appliance.
26. The appliances are not intended to be operated by means of an external timer or separate remote-control system.
27. Accessible parts may become hot during use. Young children should be kept away.
28. Steam cleaner is not to be used.
29. During use the appliance becomes hot. Care should be taken to avoid touching heating elements inside the oven.

30. **WARNING:** The appliance and its accessible parts become hot during use. Care should be taken to avoid touching heating elements. Children should be kept away unless continuously supervised.
31. The rear surface of appliance should be placed against a wall.
32. The microwave oven should be used freestanding but not built-in or in a cabinet.

**READ CAREFULLY AND KEEP FOR FUTURE REFERENCE**

# To Reduce the Risk of Injury to Persons

## Grounding Installation

### **DANGER**

Electric Shock Hazard

Touching some of the internal components can cause serious personal injury or death . Do not disassemble this appliance.

### **WARNING**

Electric Shock Hazard

Improper use of the grounding can result in electric shock.

Do not plug into an outlet until appliance is properly installed and grounded.

This appliance must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This appliance is equipped with a cord having a grounding wire with a grounding plug . The plug must be plugged into an outlet that is properly installed and grounded.

Consult a qualified electrician or serviceman if the grounding instructions are not completely understood or if doubt exists as to whether the appliance is properly grounded. If it is necessary to use an extension cord , use an approved type 3-wire extension cord.

1. A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
2. If a long cord set or extension cord is used:
  - 1) The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance.

- 2)The extension cord must be approved type 3-wire cord.
- 3)The long cord should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over unintentionally.

## **CLEANING**

Be sure to unplug the appliance from the power supply.

- 1.Clean the cavity of the oven after using with a slightly damp cloth.
- 2.Clean the accessories in the usual way in soapy water.
- 3.The door frame and seal and neighbouring parts must be cleaned carefully with a damp cloth when they are dirty.
- 4.Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.
- 5.Cleaning Tip---For easier cleaning of the cavity walls that the food cooked can touch:  
Place half a lemon in a bowl, add 300ml(1/2 pint) water and heat on 100%microwave power for 10 minutes.  
Wipe the oven clean using a soft, dry cloth.

# UTENSILS

## CAUTION

### Personal Injury Hazard

It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.

See the instructions on "Materials you can use in microwave oven or to be avoided in microwave oven."

There may be certain non-metallic utensils that are not safe to use for microwaving. If in doubt, you can test the utensil in question following the procedure below.

### Utensil Test:

1. Fill a microwave-safe container with 1 cup of cold water (250ml) along with the utensil in question.
2. Cook on maximum power for 1 minute.
3. Carefully feel the utensil. If the empty utensil is warm, do not use it for microwave cooking.
4. **Do not exceed 1 minute cooking time.**

### Materials you can use in microwave oven

Utensils	Remarks
Aluminum foil	Shielding only. Small smooth pieces can be used to cover thin parts of meat or poultry to prevent overcooking. Arcing can occur if foil is too close to oven walls. The foil should be at least 1 inch (2.5cm) away from oven walls.
Browning dish	Follow manufacturer's instructions. The bottom of browning dish must be at least 3/16 inch (5mm) above the turntable. Incorrect usage may cause the turntable to break.
Dinnerware	Microwave-safe only. Follow manufacturer's instructions. Do not use cracked or chipped dishes.
Glass jars	Always remove lid. Use only to heat food until just warm. Most glass jars are not heat resistant and may break.
Glassware	Heat-resistant oven glassware only. Make sure there is no metallic trim. Do not use cracked or chipped dishes.

Oven cooking bags	Follow manufacturer's instructions. Do not close with metal tie. Make slits to allow steam to escape.
Paper plates and cups	Use for short-term cooking/warming only. Do not leave oven unattended while cooking.
Paper towels	Use to cover food for reheating and absorbing fat. Use with supervision for a short-term cooking only.
Parchment paper	Use as a cover to prevent splattering or a wrap for steaming.
Plastic	Microwave-safe only. Follow the manufacturer's instructions. Should be labeled "Microwave Safe". Some plastic containers soften, as the food inside gets hot. "Boiling bags" and tightly closed plastic bags should be slit, pierced or vented as directed by package.
Plastic wrap	Microwave-safe only. Use to cover food during cooking to retain moisture. Do not allow plastic wrap to touch food.
Thermometers	Microwave-safe only (meat and candy thermometers).
Wax paper	Use as a cover to prevent splattering and retain moisture.

## Materials to be avoided in microwave oven

Utensils	Remarks
Aluminum tray	May cause arcing. Transfer food into microwave-safe dish.
Food carton with metal handle	May cause arcing. Transfer food into microwave-safe dish.
Metal or metal-trimmed utensils	Metal shields the food from microwave energy. Metal trim may cause arcing.
Metal twist ties	May cause arcing and could cause a fire in the oven.
Paper bags	May cause a fire in the oven.
Plastic foam	Plastic foam may melt or contaminate the liquid inside when exposed to high temperature.
Wood	Wood will dry out when used in the microwave oven and may split or crack.


# SETTING UP YOUR OVEN

## Names of Oven Parts and Accessories

Remove the oven and all materials from the carton and oven cavity.

Your oven comes with the following accessories:


Glass tray	1
Turntable ring assembly	1
Instruction Manual	1

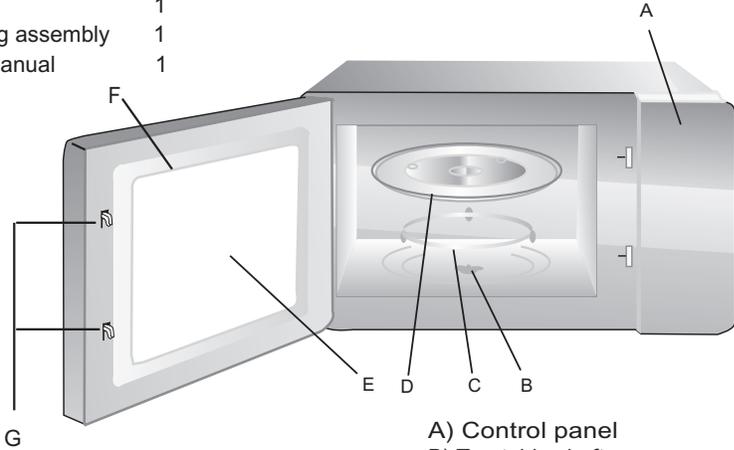

- A) Control panel
- B) Turntable shaft
- C) Turntable ring assembly
- D) Glass tray
- E) Observation window
- F) Door assembly
- G) Safety interlock system

Grill Rack( Only be used in grill function and be placed on the glass tray )

## Turntable Installation

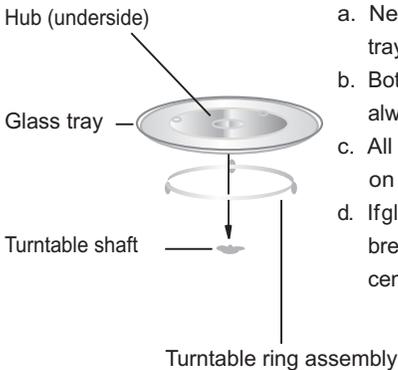

- a. Never place the glass tray upside down. The glass tray should never be restricted.
- b. Both glass tray and turntable ring assembly must always be used during cooking.
- c. All food and containers of food are always placed on the glass tray for cooking.
- d. If glass tray or turntable ring assembly cracks or breaks, contact your nearest authorized service center.

# Countertop Installation


Remove all packing material and accessories. Examine the oven for any damage such as dents or broken door. Do not install if oven is damaged.

Cabinet: Remove any protective film found on the microwave oven cabinet surface. Do not remove the light brown Mica cover that is attached to the oven cavity to protect the magnetron.

---

## Installation

1. Select a level surface that provide enough open space for the intake and/or outlet vents.

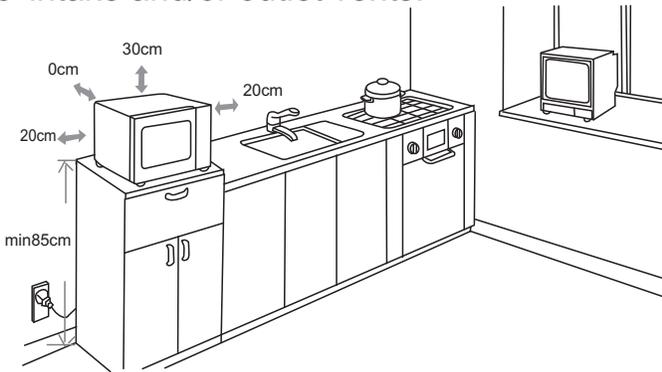

- (1) **The minimum installation height is 85cm.**
- (2) **The rear surface of appliance shall be placed against a wall. Leave a minimum clearance of 30cm above the oven, a minimum clearance of 20cm is required between the oven and any adjacent walls.**
- (3) **Do not remove the legs from the bottom of the oven.**
- (4) Blocking the intake and/or outlet openings can damage the oven.
- (5) Place the oven as far away from radios and TV as possible. Operation of microwave oven may cause interference to your radio or TV reception.

2. Plug your oven into a standard household outlet. Be sure the voltage and the frequency is the same as the voltage and the frequency on the rating label.

## **WARNING:**

Do not install oven over a range cooktop or other heat-producing appliance. If installed near or over a heat source, the oven could be damaged and the warranty would be void.

**The accessible surface  
may be hot during  
operation.**



# Operation Instructions

## 1. CLOCK SETTING

Your microwave oven is equipped with a clock. You must set the clock when you first install your oven or after a power failure.

- 1) Press "  " once, "00:00" will be displayed and it is a 24 hours clock.
- 2) Press number buttons to set the hour and minute.
- 3) Finally, press "  " and the time will be set.

For example: Set the time to 12:12pm.

- 1) Press "  " ,
- 2) Press "1", "2", "1", "2" to input the hour and minute and it displays "12:12";
- 3) Press "  " and the time will be set.

Note: 1) ":" will flash when time has been set.

- 2) During the process of clock setting, if you press "  ", the oven will go back to the previous status automatically.

## 2. KITCHEN TIMER FUNCTION

Your microwave oven is equipped with a timer.

- 1) Press "  " twice, "00:00" will be displayed
- 2) Press number buttons to set the minute and second.
- 3) Press "  " to confirm the setting and the timer will start to count down.

For example: Set the timer to 12:00 mins .

- 1) Press "  " ;
- 2) Press "1", "2", "0", "0" to input the minute and second and it displays "12:00";
- 3) Press "  " to confirm the setting and the timer will start to count down.
- 4) Once the timer has counted down to zero, it will beep 5 times.

Note : During the timer count down, other function cannot be used.

Press "  " to cancel coun down.

### 3 . MICROWAVE COOKING

- 1) Press "  " once to select the microwave cooking in 100% cooking, then continue to press "  " to select the required microwave power until the required power setting is reached.
- 2) Input the cooking time by pressing on the number buttons. (The maximum setting time is 99 minutes 99 seconds.)
- 3) Press "  " to start cooking.

Example: Setting cooking time of 20 minutes on power 80%.

- 1) Press "  " twice to microwave power 80%.
- 2) Press "2", "0", "0", "0" to set the cooking time to 20 minutes.
- 3) Press "  " to start cooking.
- 4) When the cooking is finished, the oven will beep 5 times.

#### Microwave power chart

No. of time to press on "  " button	Microwave power level	Display
1	100%	P100
2	80%	P 80
3	50%	P 50
4	30%	P 30
5	10%	P 10

Always remember that cooking instructions are intended only as a guide. If you have followed the instructions and the food is still not piping hot throughout, simply return it to the oven and cook it until it is.

## 4 . GRILL COOKING

This function allows food to be cooked and grilled for browning at the same time.

- 1) Press "  " once, the LED displays "G-1".
- 2) Input the cooking time by pressing on the number buttons.
- 3) Press "  " to start the cooking.


Example : setting cooking time of 20 minutes and 30 seconds.

Please put the food into the oven by using the grill stand (recommend).

- 1) Press "  " once, the LED display " G-1 " .
- 2) Press "2", "0", "3", "0" to set the cooking time to 20 minutes and 30 seconds,
- 3) Press "  " to start cooking.

- 4) When the cooking is finished, the oven will beep 5 times.

**Note:** When the cooking time is halfway through, the oven will produce two beep sounds to let you know. This is normal. If you want to turn the food over, you can open the door and oven will stop immediately. You can now turn the food over

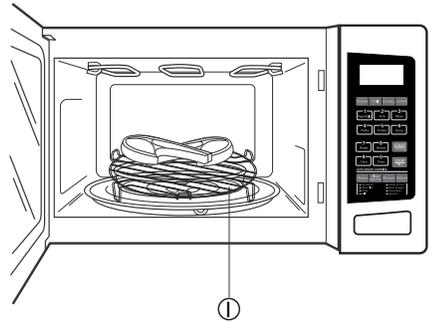

 
and close the door. Then press "  " to continue the cooking. If you do not need to turn the food over, you can just leave it to continue to cook.

**Note:** Always use the grill stand when using the grill cooking.

## 5 . CONVECTION COOKING

The convection cooking can let you to cook the food as a traditional oven. Microwave is not used. You can set the temperature from 150°C to 240°C. It is recommended that you should preheat the oven to the appropriate temperature before placing the food in the oven.

### A. Preheating the oven

- 1) Press the "  " button to select the convection cooking. The LED displays "150°C" and "  " .
- 2) To select the required temperature by repeatedly pressing "  " button until required temperature is reached.

Temperature Level	Temperature	Display
Minimum temperature	150°C	
2	160°C	
3	170°C	
4	180°C	
5	190°C	
6	200°C	
7	210°C	
8	220°C	
9	230°C	
Maximum temperature	240°C	

3) Press the "  " to start preheating. When temperature reaches, it will beep two times to remind you and it will maintain at the selected temperature for 5 minutes.

#### B. Convection cooking (after preheating function)

 
1) Open the door and put the food in. Then close the door and press number buttons to set the cooking time. (The maximum setting time is 99 minutes 99 seconds.)

2) Press the "  " key to start cooking.

3) When the cooking has finished, the oven will beep five times.

#### C. Convection cooking( without pre-heating function)

1) Press the "  " once to select the convection cooking. The LED displays "150°C" and "  "

2) To select the required temperature by repeatedly pressing "  " button until required temperature is reached.

3) Press number buttons to set the cooking time. (The maximum setting time is 99 minutes 99 seconds.)

4) Press the "  " key to start cooking.

5) When the cooking has finished, the oven will beep five times.

## 6. COMBINATION COOKING-GRILL & MICROWAVE & CONVECTION

Before using this function, it is highly recommend to carry out the pre-heat function according to the Convection Cooking section if you use the combination cooking with convection cooking.

There are four cooking methods (C-1, C-2, C-3 or C-4) for you to select.

- 1) Press "  " once, the LED displays "C-1". Continue to press "  " to select the required combination cooking until the required power setting is selected.

Combination	LED Display	Microwave Power	Convection Power	Grill Power
1	C-1	●	●	
2	C-2	●		●
3	C-3		●	●
4	C-4	●	●	●

- 2) Input the cooking time by pressing on the number buttons.

- 3) Press "  " to start the cooking.

Example : setting cooking time of 15 minutes and 30 seconds under C-3.

Please put the food into the oven by using the grill stand (recommend).

- 1) Press "  " three times, the LED display " C-3 ".
- 2) Press "1", "5", "3", "0" to set the cooking time to 15 minutes and 30 seconds,
- 3) Press "  " to start cooking.

- 4) When the cooking is finished, the oven will beep 5 times.

Note: Always use the grill stand when using the grill cooking.

## 7. DEFROST

The defrosting function is the gentle thawing of uncooked food. Flat foodstuff thaws better than bulky food. Distribute the food as evenly as possible on the turntable.

### A. Defrost By Time

Example: Defrost beef for 5 minutes.

- 1) Press "  "once, LED will display "d-1".
- 2) Press "5" "0" "0" to until the desire time setting for defrosting is reached. The maximum setting time is 99 minutes 99 seconds.
- 3) Press "  " to start defrosting.

## B. Defrost By Weight

Example: Defrost beef of 500g:

- 1) Press "  " twice, the LED displays " d-2 ". The range of defrosting weight is 100 to 2000g.
- 2) Continue to press number buttons to select the required defrosting weight.
- 3) Press "  " to start defrosting.

## C. Defrost for ground meat and seafood

Example: Defrost ground meat or seafood of 500g:

- 1) Press "  " three or four times, the LED displays " d-3 " or " d-4 ".  
The range of defrosting weight is 100 to 2000g.
- 2) Continue to press number buttons to select the required defrosting weight.
- 3) Press "  " to start defrosting.

Note: When the cooking time is halfway through, the oven will produce two beeps to let you know. If you want to turn the food over, open the door and oven will stop immediately. You can now turn the food over and close the door. Then press "start" to continue the cooking. If you do not need to turn the food over, you can just leave it to continue to cook.

## 8 . SPEEDY MICROWAVE COOKING

- 1) In standby state, press "  " button to cook with 100% power level for 30 seconds. Each press on the same key can increase 30 seconds. The maximum cooking time is 99 minutes 99 seconds.
- 2) During microwave, grill, Combi. and time defrost process, press "  " to increase cooking time. Each press will increase 30 seconds.

Note: this function cannot work under defrost, auto function and multi-stage cooking.

## 9 . MICROWAVE AUTO FUNCTION

This auto function has ten pre-programmed cooking. You do not need to set either cooking times or the power level. The table below shows the time taken to cook weight of food.

- 1). In standby states, select auto setting by pressing number buttons "0 - 9".
- 2). Continue to press the same number button to select the weight. i.e. portion / gram.
- 3). Press "  " to start cooking
- 4). When the cooking is finished, the oven will beep 5 times.

Note: (1) When you choose Cake, please do not put the cake into the oven at the beginning. The oven needs to be preheated to 180 degree first. After several minutes, the buzzer sounds twice to remind you to put the cake into the oven. After putting the cake in the oven, please press start "  " to start the cooking.

(2) Roast chicken cooking - When the cooking time is halfway through, the oven will produce two beep sounds. This is normal. If you want to turn the food over, you can open the door and oven will stop immediately. You can turn the food over and close the door Then press "  " to continue the cooking. If you donot need to turn the food over, just leave it to continue to cook. And cook roast chicken with 50mm height grill stand.

 
(3) Cake cooking - use the 98mm height grill stand.

## Auto menu Chart

Menu	Weight(g)	Press Times	Display
<b>1</b> Vegetable	150	Once	150
	350	Twice	350
	500	Thrice	500
<b>2</b> Fish	150	Once	150
	250	Twice	250
	350	Thrice	350
	450	4 times	450
	650	5 times	650
<b>3</b> Meat	150	Once	150
	300	Twice	300
	450	Thrice	450
	600	4 times	600
<b>4</b> Pasta	50(with cold water 450 ml)	Once	50
	100(with cold water 800 ml)	Twice	100
	150(with cold water 1200ml)	Thrice	150
<b>5</b> Potato	1(approximately 230g)	Once	1
	2(approximately 460g)	Twice	2
	3(approximately 690g)	Thrice	3
<b>6</b> Soup	200ml	Once	200
	400ml	Twice	400
	600ml	Thrice	600
<b>7</b> Roast	500	Once	500
	750	Twice	750
	1000	Thrice	1000
	1200	4 times	1200
<b>8</b> Bread	50g	Once	50
	100g	Twice	100
	150g	Thrice	150
<b>9</b> Cake	475g	Once	475
<b>0</b> Pizza	200g	Once	200
	300g	Twice	300
	400g	Thrice	400

## 10 . MEMORY COOKING

 
The oven is equipped with three programs for you to input.

- 1) Press "  " key to select this function. Continue to press to select one of three program to input your cooking , i.e 1 to 3.
- 2) Select one of the cooking method and input the cooking time.You can input up to two stage cooking method.
- 3) Press "  " to save the program.
- 4) Next time when you want to cook with the pre-set memory program you just need to press "  " to choose the suitable program and press "  " to start cooking.

Example: to set the following procedure as the second memory, that is memory 2.

to cook the food with 80% microwave power for 3 minutes and 20 seconds.

The steps are as follow:

- a. In waiting states, press "  " twice and the screen displays "2".
- b. Press "  " twice and "P80" displays.
- c. Press number keys "3","2","0".
- d. Press "  " to save the setting. Buzzer sounds once then turn back to waiting states.
- e. Next time when you want to cook with the memory program which has been set, you can just press "  " to choose the desire program and then press "  " to start the cooking.

Note : The program will not be kept after power failure.

## 11 . REHEAT FUNCTION

- 1) Press "  ", the "h-1" will display in oven and flash. Continue to Press "  " to select the desire program.
- 2) Press "  " to confirm, the "h-1" will display
- 3) Press "  ", the oven will display "150". Continue to Press "  " to select the suitable weight/portion.
- 4) Press "  " key to start cooking.
- 5) When the cooking has finished, it will beep five times.

## Reheat Chart

Menu	Weight(g)	Display
h-1 (Auto Reheat)	150	150
	250	250
	350	350
	450	450
	600	600
h-2 (Dinner Plate)	250	250
	350	350
	450	450
h-3 (Beverage/Coffee)	1(approximately 240g)	1
	2(approximately 480g)	2
	3(approximately 720g)	3
h-4 (Roll/Muffin)	1(approximately 70g)	1
	2(approximately 140g)	2
	3(approximately 210g)	3

## 12 . MULTI-STAGE COOKING

This microwave can be set up to 2 stages cooking.

Example: cook with 100% microwave power for 10 minutes + grill cooking for 5 minutes.

The steps are as following:

- 1) Press "  " once to choose 100% microwave power;
- 2) Press "1", "0", "0", "0" to set the cooking time of 10 minutes;
- 3) Press "  " once, "G-1" will display;
- 4) Press "5", "0", "0" to set cooking time of 5 minutes;
- 5) Press "  " to start cooking.

When the cooking is finished, it will beep five times.

Note : (1) If one of the stages is defrosting, the defrost cooking will be started at the 1st stage automatically.

(2) The buzzer will ring once after each stage and the next stage will begin.

## 13 . CHECKING STAGE OF COOKING

While cooking press "  ", "  " or "  ", it will display the current power, i.e. P100, after three seconds, it will revert to the former time count down.

## 14 . CHILD SAFETY LOCK FUNCTION

Lock: In waiting state, press "  " for 3 seconds, a long "beep" will be heard denoting entering into the children-lock state and "  " indicator will be illuminated.

Unlock: In locked state, press "  " for 3 seconds, a long "beep" will be heard denoting that the lock is released, and "  " indicator will go off.

## Trouble shooting

<b>Normal</b>	
Microwave oven interfering TV reception	Radio and TV reception may be interfered when microwave oven operating. It is similar to the interference of small electrical appliances, like mixer, vacuum cleaner, and electric fan. It is normal.
Dim oven light	In low power microwave cooking, oven light may become dim. It is normal.
Steam accumulating on door, hot air out of vents	In cooking, steam may come out of food. Most will get out from vents. But some may accumulate on cool place like oven door. It is normal.
Oven started accidentally with no food in.	It is dangerous to run the unit without any food inside.

<b>Trouble</b>	<b>Possible Cause</b>	<b>Remedy</b>
Oven can not be started.	(1) Power cord not plugged in tightly.	Unplug. Then plug again after 10 seconds.
	(2) Fuse blowing or circuit breaker works.	Replace fuse or reset circuit breaker.
	(3) Trouble with outlet.	Test outlet with other electrical appliances.
Oven does not heat.	(4) Door not closed well.	Close door well.
Glass turntable makes noise when microwave oven operates	(5) Dirty roller rest and oven bottom.	Refer to Cleaning instruction to clean dirty parts.



DO NOT dispose this item with normal household waste collection. If unsure, contact your local council waste management service for proper disposal facilities available for your area.



## **12 Month Warranty**

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on **1800 124 125** (Australia) or **0800 945 995** (New Zealand) or alternatively, via email at **customer.satisfaction@kmart.com.au** for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

PN: