

公司名称:	佛山顺德天佑实业有限公司	订单号:	B1610021	工厂型号:	TY350AL黑	设计员:	玲
图纸名称:	说明书	客户:	澳洲KMART	客户型号:	TY400AL	业务员:	PAUL
图纸编号:		商标:	HOMEMAKER			签发日期:	

142.5*210mm, 105克铜版纸8个P单色双面印刷



**ELECTRIC OVEN
WITH INTERIOR LAMP**



INSTRUCTION MANUAL

Model No. TY400AL
220-240V~ 50Hz 1500W

Please read carefully before use and save the instructions for future reference

IMPORTANT SAFEGUARDS
When using electrical appliances, basic precautions should always be followed, which include the following:

1. Read all instructions before use or cleaning.
2. Close supervision is necessary when any appliance is used near children.
3. Do not immerse cord, plug, or any part of the appliance in water or other liquids.
4. Do not let cord hang over edge of table or counter, or touch hot surfaces.
5. Do not operate appliance with damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. If the appliance is damaged or broken, do not repair yourself, if the power cord or the plug is broken or damaged, do not repair or change yourself, please send the appliance to qualified service centre for repair or service.
6. When operating the oven, keep at least four inches (ten centimeters) of space on all sides of the oven to allow for adequate air circulation.
7. To disconnect, turn the selector and timer dial to OFF and then disconnect from mains power.
8. Unplug from mains power outlet when not in use and before cleaning. Always hold the plug, never pull from the cord.
9. Allow the appliance to cool before putting on or taking off parts, and before cleaning.
10. Extreme caution must be used when removing containers containing hot oil or food.
11. Do not cover any part of the oven with metal or cloth, it may cause overheating of the oven.
12. Do not place any item on the oven or cover the oven.
13. Use extreme caution when removing tray or disposing of hot grease or other hot liquids.
14. Never leave the appliance unattended when in use.
15. Oversized foods or metal utensils should not be used in the oven as they may cause a fire or pose an electric shock hazard.
16. Extreme caution should be exercised when using containers constructed of anything other than metal or ceramics. If unsure do not use it in the oven.
17. Do not place any of the following materials in the oven: plastic, paper, or anything similar.
18. Do not use any accessories other than manufacturer recommended accessories in this oven.
19. Always wear protective, insulated oven gloves when inserting or removing items from the hot oven.
20. Do not use this appliance for any use other than its intended use.
21. This appliance is for HOUSEHOLD USE only.
22. The glass door is heavy, please hold the handle until the door is completely open, do not let the door fall itself.
23. Children should be supervised to ensure that they do not play with the appliance.
24. This appliance is not intended for use by person (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
25. If the supply cord damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid hazard.
26. CAUTION! The temperature of accessible surfaces may be high when the appliance is operating.
27. The appliances are not intended to be operated by means of an external timer or separate remote-control system.
28. The surface are liable to get hot during use.

12 Month Warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at Kmart.com.au for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.


LIST OF COMPONENTS

1. Thermostat dial
2. Selector dial
3. Lamp (interior)
4. Power light
5. Timer dial
6. Glass door
7. Baking pan
8. Wire rack
9. Pan handle




SELECTOR DIAL

1. OFF
2. Top heating
3. Bottom heating
4. Top & bottom heating

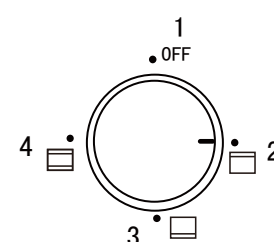

TIMER DIAL

When timer is turned on, the lamp is ON.
When timer is turned off, the lamp is OFF.

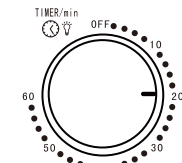

BEFORE USE

- Ensure that there is enough ventilation around the oven.
- Ensure that the oven is completely dry before use.
- The oven should not be placed on untreated wooden surface. Place the oven on a heat resistant surface.
- The feet of the oven can leave some marks when used on a table. If this happens, remove the marks with a damp cloth or use surface cleaner.

HOW TO USE THE OVEN

- Turn the thermostat dial clockwise to the desired temperature.
- Turn the selector dial to the desired position.
- Turn the timer dial clockwise to the desired cooking time.
- The interior lamp and the power light will light up when the timer is turned ON, and will go out when the timer is turned to OFF.

- When the cooking time is over, the timer will auto shut OFF and the bell will ring.
- To stop cooking earlier than the set cooking time, please turn the timer back to OFF to switch OFF the oven.
- On first use, the oven may emit some light smoke, this is normal. This should disappear after 5-10 minutes of use.
- In order to get better cooking result, it is recommended to pre-heat the oven for about 10-15 minutes.

GRILL COOKING

- Open the glass door.
- Turn the selector to GRILL setting (top heating).
- Turn the temperature dial to 250°C.
- Turn the timer to the desired grill time.
- When the grill cooking is done, turn the timer back to OFF to switch OFF the oven.

AFTER USE

- Turn the timer dial back to OFF.
- Turn the selector dial to OFF.
- Unplug the appliance from the outlet.
- Wait until the oven is completely cool before any cleaning or maintenance.

MAINTENANCE AND CLEANING

- Unplug the appliance and allow it to cool before cleaning.
- Do not immerse the appliance in water. All surfaces can be cleaned with a clean damp cloth.
- If stains still appear, it is recommended to use soap or mild detergent.
- Do not use abrasive cleaners or sharp utensils to clean the appliance.
- Clean the interior chamber with a clean damp cloth.