

# anko

---

32" INCH 2.0 CH BLUETOOTH SOUNDBAR SPEAKER

 
 


**MODEL:SBB-03905**

PLEASE READ CAREFULLY BEFORE OPERATING THIS EQUIPMENT



# IMPORTANT SAFETY INSTRUCTIONS

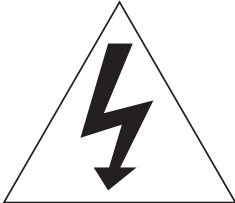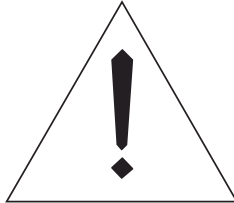	<b>CAUTION</b> <b>RISK OF ELECTRIC SHOCK</b> <b>DO NOT OPEN</b>	
<p>CAUTION: TO REDUCE THE ELECTRIC SHOCK, DO NOT REMOVE THE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p>		



**DANGEROUS VOLTAGE:** The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



**ATTENTION:** The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.


**WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.**

**WARNING: USE UNDER SUPERVISION OF AN ADULT DUE TO LONG CORD.** This unit has a long cord that can be easily tripped on or pulled on, causing injury. Please make sure it is arranged so that it will not drape over a tabletop, etc., where it can be pulled on by children or tripped over accidentally.

**WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and that objects filled with liquids, such as vases, shall not be placed on apparatus.

# IMPORTANT SAFETY INSTRUCTIONS

 
Before using the unit, be sure to read all operating instructions carefully. Please note that these are general precautions and may not pertain to your unit. For example, this unit may not have the capability to be connected to an outdoor antenna.

1. Read these instructions – All the safety and operating instructions should be read before the appliance is operated.
2. Keep these instructions – The safety and operating instructions should be kept for future reference.
3. Heed all warnings – All warnings on the appliance and in the operating instructions should be adhered to.
4. Follow all instructions – All operation and use instructions should be followed.
5. Do not use this apparatus near water – The appliance should not be used near water; for example, near a bath tub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool.
6. Clean only with dry cloth – The appliance should be cleaned only as recommended by the manufacturer.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions. The appliance should be situated so that its location or position does not interfere with its proper ventilation. For example, the appliance should not be situated on a bed, sofa, rug, or similar surface that may block the ventilation openings; or placed in a built-in installation, such as a bookcase or cabinet that may impede the flow of air through the ventilation openings.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades and a third grounding prong. The wide or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments / accessories specified by the manufacturer.
12. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over. 
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. This appliance should not be exposed to dripping or splashing water and no object filled with liquids such as vases should be placed on the apparatus.
16. Power Sources – The appliance should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance. Do not overload wall outlet.
17. Battery should not be exposed to excessive heat such as sunshine, fire, etc.
18. Replace remote control battery only with the same or equivalent type.
19. Do not attempt to dismantle, open or repair this product yourself. If a problem occurs, seek advice from your local qualified service technician or contact the distributor at the telephone number at the back of this instruction manual.
20. Caution marking and nameplate are located on back or bottom of product.

## PLACING AND MOUNTING

 
### Placing

When placing the Sound Bar on an entertainment center, bookshelf, or any type of enclosed space, be sure to allow at least 2-3 inches of space around the Sound Bar for ventilation. If the Sound Bar is enclosed in a tight space, without ventilation, heat generated from the Sound Bar could produce a potential heat hazard.

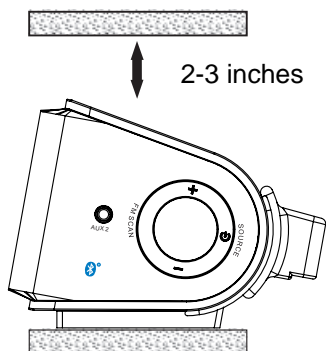 


### Mounting

We recommend having this speaker professionally mounted. By using the included wall mounting accessories, the sound bar can be mounted onto a wall.

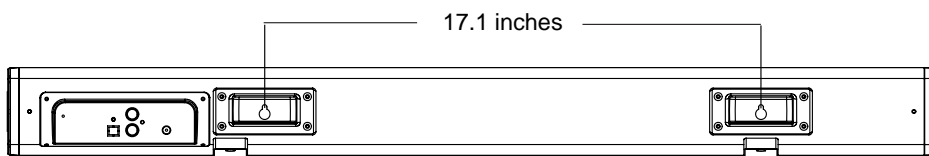 


## Mounting on the wooden wall

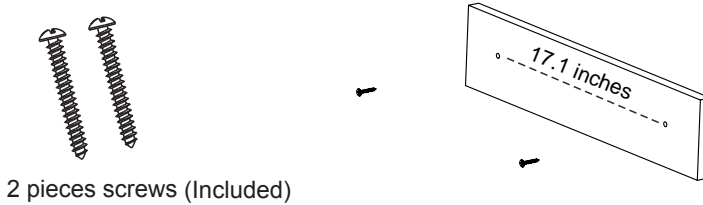 


1. Mark the position of the mounting screws on the wall using a pencil.
2. Drill the supplied screws directly into the marks that you have made on the wall and leave approx. 0.3 inch length to hook the sound bar.
3. Put the sound bar onto the mounting screws. Make sure they are firm and stable.

## Mounting on the brick wall

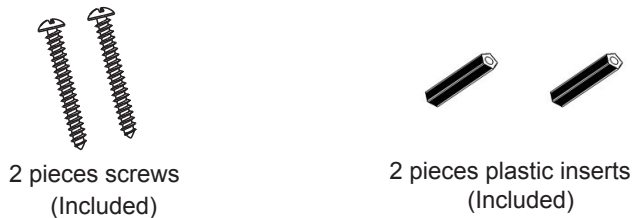 


1. Mark the position of the mounting screws on the wall using a pencil.
2. Drill 2 x 7/32 inch diameter holes by a powerful electric drill ( Not supplied ).
3. Insert the supplied plastic inserts into the holes by hammer ( Not Supplied ).
4. Secure the supplied screws into the plastic insert and leave approx. 0.3 inch length to hook the sound bar.
5. Put the sound bar onto the mounting screws. Make sure they are firm and stable.

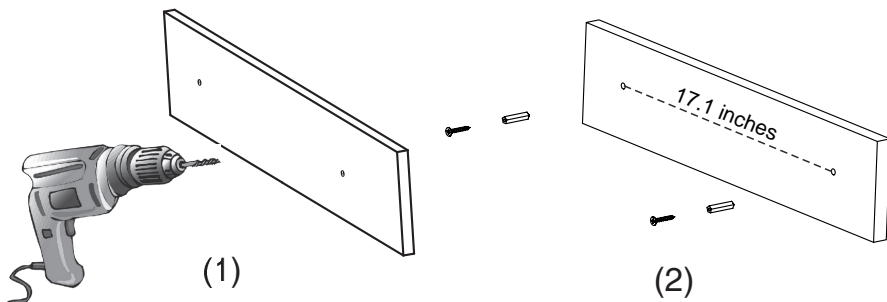 


# LOCATION OF CONTROLS

 
Front View

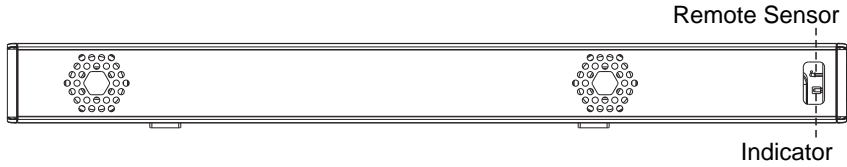

 
Back View

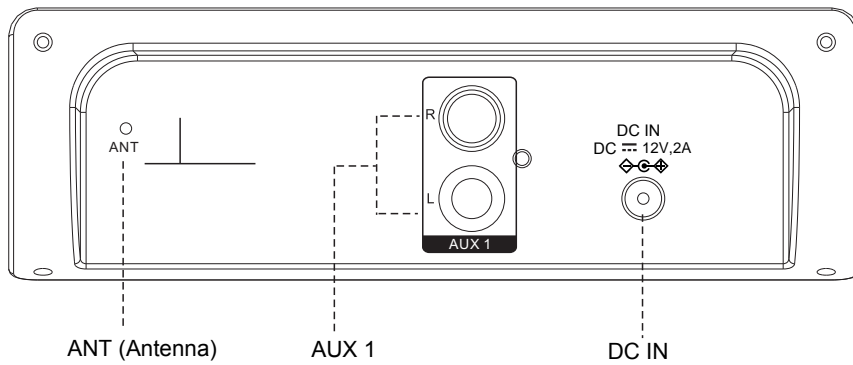

Side View

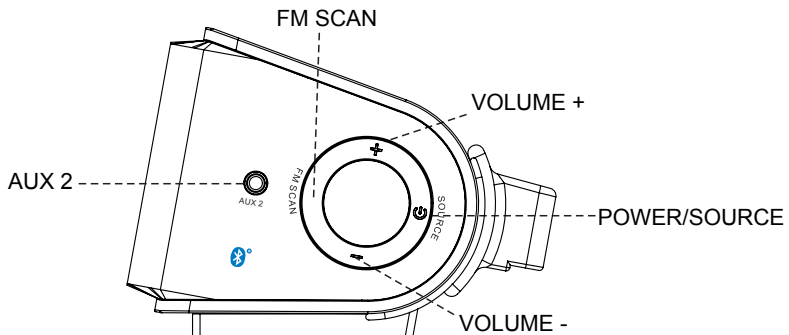

## REMOTE CONTROL

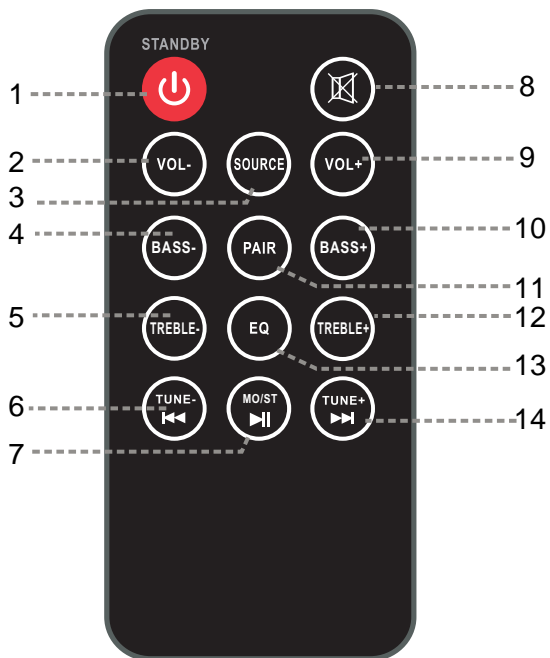

1. (Power)/STANDBY Button

2. Volume Down Button

3. SOURCE Button

4. Bass Down Button

5. Treble Down Button

6. (Previous)/Tune Down Button

7. (Play/Pause)  
MO/ST(Mono/Stereo)Button

8. (Mute) Button

9. Volume Up Button

10. Bass Up Button

11. PAIR Button

12. Treble Up Button

13. EQ (Equalizer) Button

14. (Next)/Tune Up Button



 
 
 
 
## BATTERY INSTALLATION FOR REMOTE CONTROL

### FIRST TIME USE

Remove the insulation film as illustrated on the right figure (Fig.1).

### BATTERY REPLACEMENT

1. Drive out the screw (KA1.5mm\*3mm) on the battery door.
2. Push and slide out the battery holder as illustrated in Fig.2.
3. Replace the battery with a new CR2025 button cell as the polarity markings on the rear of the Remote Control(Fig.3).
4. Close the battery holder(Fig.4).

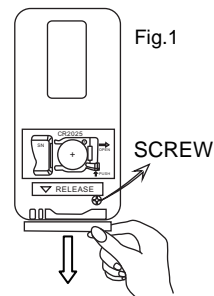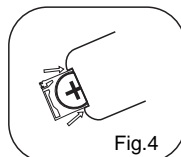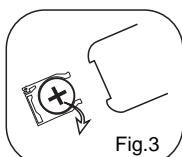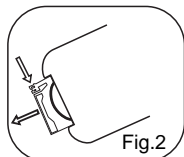

### BATTERY PRECAUTIONS

Follow these precautions when using a battery in this device:

1. Use only the size and type of battery specified.
2. Be sure to follow the correct polarity when installing the battery as indicated in the battery compartment, a reserved battery may cause damage to the device.
3. Do not mix different types of batteries together ( e.g: Alkaline and Carbon-zinc ) or old batteries with fresh ones.
4. If the batteries in the device are consumed or the device is not to be used for a long period of time, remove the batteries to prevent damage or injury from possible leakage.
5. Do not try to recharge the battery not intended to be recharged; it can overheat and rupture. ( Follow battery manufacturer's instructions.)
6. The batteries shall not be exposed to excessive heat such as sunshine, fire or the like.
7. Clean the battery contacts and also those of the device prior to battery installation.
8. Warning: Do not ingest battery, chemical burn hazard!
  - Swallowing may lead to serious injury or death in as little as 2 hours due to chemical burns and potential perforation of the oesophagus.
  - Dispose of used batteries immediately and safely. Flat batteries can still be dangerous.
  - Examine devices and make sure the battery compartment is correctly secured. e.g. That the screw or other mechanical fastener is tightened, Do not use if compartment is not secure.
  - If you suspect your child has swallowed or inserted a button battery, call the 24 hour poisons information center on 131126 or in NZ 0800 764 766 or contact your countries emergency dept.

**WARNING:** Button cell Batteries are Hazardous (new or used). Keep away from Children. Button Cell Batteries can cause severe or fatal injuries in 2 hours or less if they are swallowed or placed inside any part of the body. If you suspect your child has swallowed or inserted a button cell battery, call the 24hour poisons information centre in Australia on 131126 or in New Zealand 0800 764 766 or contact your country's emergency dept.






Used batteries must be disposed of in the garbage or a battery recycle facility

### Remote control operation range




Notes:

- When there is an obstacle between the remote and the transmitter, the unit may not operate.
- When direct sunlight, an incandescent lamp, flurescent lamp or any other strong light shines


 
 
 

## GENERAL OPERATIONS

1. Connect one end of the AC power adaptor to the unit and the plug into a wall power outlet. Switch the power on. The red light indicator will light up.
2. Press the  Power/SOURCE button on the unit or the  Power button on the remote control to power on the unit from standby mode.
3. Press the  Power / SOURCE button on the unit or the SOURCE button on remote control repeatedly to switch to desired mode, and the indicator color will turn as per the below:

Blue.....Bluetooth  
Green.....Radio  
Violet..... AUX 1  
Orange..... AUX 2

4. During Playback:
  - ~ Press the VOL ( Volume ) +/- buttons to adjust volume level as desired.
  - ~ Press the EQ button repeatedly to select and set equalizer mode as desired.
  - ~ Press  ( Mute ) button on the remote control to turn off the sound. Press again to resume.
  - ~ Press the BASS +/- buttons to adjust the sound level of bass.
  - ~ Press the TREBLE +/- buttons to adjust the sound level of treble.
5. When finished listening, press and hold the  Power /SOURCE button on the unit or press the  Power button on the remote control to power off ( Standby mode ) the unit. The color of Indicator will turn Red.
6. If the unit will not be used for long period of time, unplug the AC/DC Adapter from the wall outlet.

## LISTEN TO FM RADIO


1. Power ON the unit.
2. Press the  Power/SOURCE button on the unit or the SOURCE button on the remote control repeatedly until the color of Indicator turns to Green.
3. Press the FM SCAN button on the unit to auto search and play the next available FM station. Repeat the same procedures until the desired radio station is searched and play. Or
4. Press and hold the  /TUNE - or  /TUNE + buttons on the remote control until the indicator starts blinking. The unit will start to search the next available FM radio station.
5. For fine tune, press and release the  /TUNE - or  /TUNE + buttons repeatedly.  
Note: When a FM stereo station was searched, the unit will play in stereo mode automatically.
6. If the available FM station is stereo, the unit will play in stereo mode automatically.  
If the reception is bad, press the MO/ST button on remote control to switch to mono mode. Press again to resume stereo mode.

### FM Antenna

The Antenna wire on the rear of the unit is for radio reception. If reception is weak, unwind and extend the wire or relocate the wire to improve the radio reception.





## BLUETOOTH PAIRING AND PLAYBACK

First time pairing or re-pairing with an external device:

1. Power ON the unit.
2. Press the  Power/SOURCE button on the unit or the SOURCE button on the remote control repeatedly until the color of Indicator turns to Blue and blink.
3. Power on the external BT Device and enter to searching mode. Start pairing as the on screen instructions on the external BT Player. After paired, the Indicator will stop blinking.  
( For details pairing procedures, please refer to the user's manual of your BT Device. )
4. Press the PAIR button on remote control to cut off the current connection, and try to pair with other device by the above steps.

 
Notes: ~ When the external BT Device searched the unit, our model number "SBB-03905" will appear on the display of the external BT Device.  
~ Pairing code "0000" may need to be entered.




Normal operation after paired:

1. Turn on the BT function of the external BT Device.
2. Power ON the unit.
3. Press the  Power/SOURCE button on the unit or the SOURCE button on the remote control repeatedly until the color of Indicator turns to Blue.
4. Wait a few seconds until the unit is paired to the external BT Device automatically.
5. Play the music in the connected BT Device.
6. During playback:  
--Press the  button to pause, press again to resume normal playing.  
--Press the  /TUNE - or  /TUNE + buttons to skip tracks.

## AUX 1

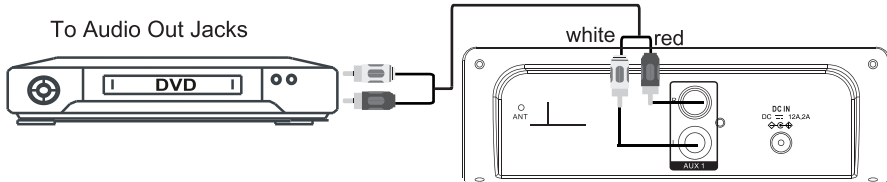 
1. Connect the Aux out jacks from the external audio player ( such as TV, DVD player VCR ...etc. ) to the AUX 1 jacks on the rear of unit by the supplied RCA Connection Cable as the figure below:



 


2. Connect the unit to the power as previous procedures.
3. Press the  Power/SOURCE button on the unit or the  Power button on the the remote control to power on the unit.
4. Press the  Power/SOURCE button on the unit or SOURCE button on remote control repeatedly until the color of Indictaor turns to Violet.
5. Power on the connected external player and start playback music as usual.


## AUX 2

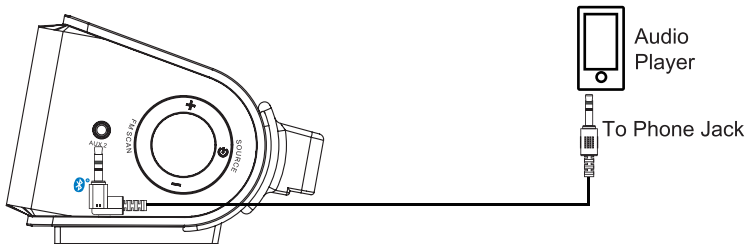1. Connect the Headphone/Earphone; Line out jacks from the external audio player ( such like MP3 player; Discman ... etc ) to the AUX 2 jack on the Right side of unit by the supplied Audio Connection Cable as the figure below:

 


2. Connect the unit to the power as previous procedures.
3. Press the  Power/SOURCE button on the unit or the  Power button on the the remote control to power on the unit.
4. Press the  Power/SOURCE button on the unit or the SOURCE button on remote control repeatedly until the color of Indictaor turns to Orange.
5. Power on the connected external player and start playback music as usual.

## TROUBLESHOOTING GUIDE

<b>Check the followings before requesting service</b>		
<b>SYMPTOM</b>	<b>POSSIBLE CAUSE</b>	<b>POSSIBLE SOLUTION</b>
No power	Power AC/DC adapter not connected	Connect the power AC/DC adapter
	The unit is in Standby mode	Press  button to turn on the unit
No sound	Volume in minimum position	Raise volume level by pressing the VOL (Volume) + button
	The connected device is not in playback mode	Play the music/movie in the connected device as usual and make sure the volume level of it is in high level
	Input source incorrect	Press the SOURCE button repeatedly to set the input source to the desired mode
Sound distortion	Bass level of the connected device too high	Reduce the bass level of the connected device.
		Press the BASS - button on the Sound Bar to reduce bass level.
	Volume level too high	Reduce the volume level by pressing the VOL (Volume ) - button
Remote not working	The battery is consumed	Replace with new battery
Bluetooth reception failure	The external device is far from the unit	Put the external BT device close to the unit
	Have not paired	Pair both units as BT pairing page

## GENERAL SPECIFICATIONS

Power Source.....	DC $\equiv$ 12V; 2A, 
Radio Coverage.....	FM 87.5 -108.0 MHz
Audio Power.....	20W(RMS)
Bluetooth Effective Range in Open Area.....	Up to 10 meters
Remote Effective Range.....	Up to 5 meters

### ACCESSORY:

- 1 x AC/DC Adaptor
- 1 x Remote Control
- 1 x Stereo Audio Connection Cable with 3.5mm stereo plugs
- 1 x User's Manual
- 1 x RCA Connection Cable
- 2 x Plastic Inserts ( For Wall Mount )
- 2 x Metallic Screws ( For Wall Mount )

## **Warranty CARD**

---

### **12 Month Warranty**

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at [Kmart.com.au](http://Kmart.com.au) for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

