

home
&CO

Rice Cooker User's Manual

Model:MG-GP25B



Please read this User's Manual carefully before using and keep it in a good place for future reference.

IMPORTANT SAFEGUARDS

 
Read all the instructions carefully before using this appliance and keep them for future references.




1. To reduce electric shock, risk of fire or injury, please read the operating instructions carefully before using the appliance for the first time and keep them for future reference.
2. Never immerse the appliance in water or other liquids.
3. Never operate the appliance if any cable or part has been damaged or malfunctioned.
4. Electrical appliance must be repaired by qualified electrical person only or the product must be disposed.
5. Please turn off and unplug the appliance before cleaning, maintenance or relocation, and whenever it is not in use.
6. This appliance is for household use only and please use suitable voltage and frequency.
7. Do not place any objects on the appliance.
8. Please put the power cord in the right place in order to avoid tripping the unit over.
9. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
10. Children should be supervised to ensure that they do not play with the appliance.
11. When the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard
12. The device should be installed at minimum distance of 10cm from the wall or other obstacles.
13. Do not use bug sprays or other flammable cleaners near the unit and keep away from any fire and heat sources.
14. This appliance is for household use only. Do not use outdoors.

Note: To avoid any malfunction or damage, do not tilt or moving the unit during operation.

SAFEGUARDS

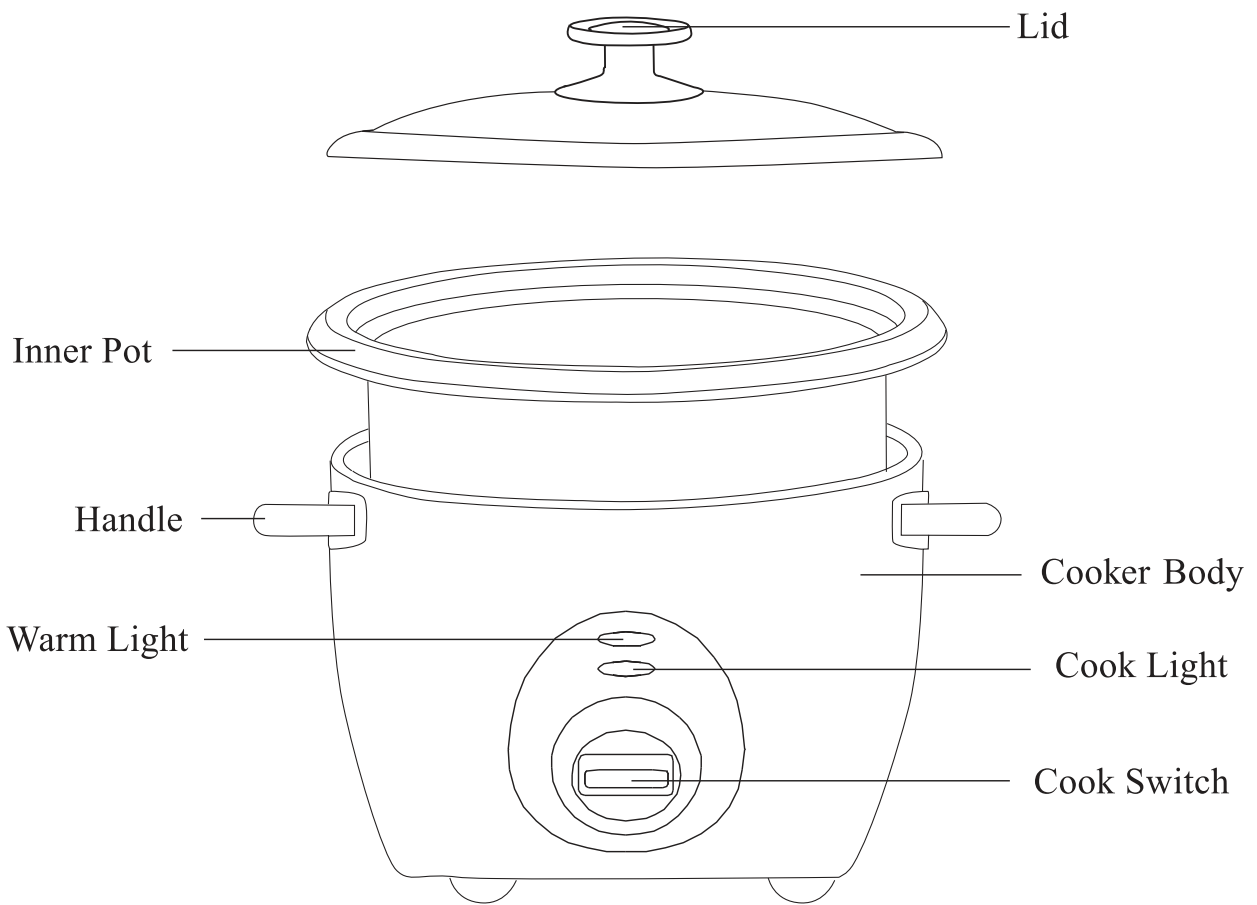1. The power cord must be closely plugged into the wall outlet with earthing.
2. Always keep the cooker unplugged when not in use or without cooking pot.
3. Do not place the cooker on a wet or unstable place, or near a fire, heating range, if not, the cooker will deform or malfunction.
4. In order to avoid deforming, do not run the pot with hard objects, or heat the pot on other stove. Never use other container instead of pot to cook.
5. Do not cover the cooker with a cloth, this may warp or discolor the outer lid.
6. The steam vent is very hot during cooking, keep face and hands away from outer lid and steam vent.
7. To protect against electric shock, do not immerse the appliance and electric cord in water or any liquid, or do not allow any liquid to fall on the electric parts.
8. The power cord must be replaced by the appliance manufacturer when it is damaged.
9. This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments
10. Do not use this appliance for any other purpose but its intended use. Do not use in moving vehicles or boats. Do not use outdoors. Do not use on a sink drain board. Misuse may cause injury.
11. Do not operate the appliance without water, it may damage the heating element.
12. Warning! The heating element surface is subjected to residual heat after use.
13. Do not use attachments or accessories which are not recommended by the manufacturer. They may cause malfunction or injury.
14. The rice cooker should be operated on a separate electrical circuit from other operating appliances. If the electrical circuit is overloaded with other appliances, the appliance may not operate properly.
15. Always make sure the outside of the inner cooking pot is dry prior to use. If the inner pot is returned to the cooker when wet, it may damage or cause the product to malfunction.
16. Rice should not be left in the inner pot with the "Keep-Warm" function on for more than 12 hrs.
17. This appliance is not intended to be operated by means of an external timer or a separate remote-control system.




Model	Power supply	Rated power(w)	Capacity(L)	Cooking method
MG-GP25B	220-240V~ 50/60Hz	450-536W	2.5L	Direct heating
Accessories	<div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;"> <p>Spoon</p>  </div> <div style="text-align: center;"> <p>Measuring Cup</p>  </div> <div style="text-align: center;"> <p>Steam Tray</p>  </div> </div>			

RICE COOKING PROCEDURE


1. Measure the desired amount of rice with the measuring cup supplied with this rice cooker. Rinse the rice several times until the water in the bowl shows relatively clear.

 - One cup of rice weight 0.18L (About 150g)
- DO NOT rinse rice in the cooking pot. If the pot is used for washing rice, the fluorine-resin coating may be damaged or the bottom may be deformed which will result in poor conduction because it contacts with heating plate improperly.
- Do not use the inner pot to cook on the stove. Otherwise, it will be deformed by high temperature heating.

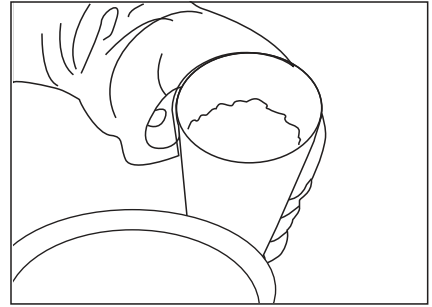


2. Put the rice into the cooking pot and water up to the level which corresponds to the measure of rice used.

 
- The line on the pot is water line. The right line corresponds to litres of rice, the left line corresponds to cups of rice. For example, if cooking two cups of uncooked rice, water should be filled to the line '2 cup' in inner pot
- NEVER add water higher than the maximum water line.

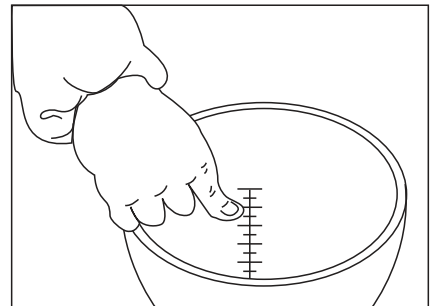

 3. Before placing the inner pot into rice cooker, check that the cooking pot is dry and free of debris, install the pot into the cooker, turn it slightly from left to right, ensure that the pot contacts with the heating plate properly, level the rice inside the pot.

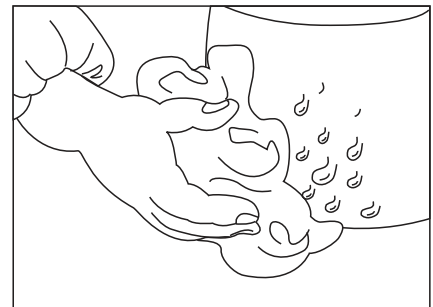

 4. Press down the "cooking" switch. The rice will start to cook. "Cook" Light will light up after plugging into socket, you must push down the "Cook" switch to start cooking. If the switch is not pressed, the "Warm" light will light up, the cooker will be in keep warm function.

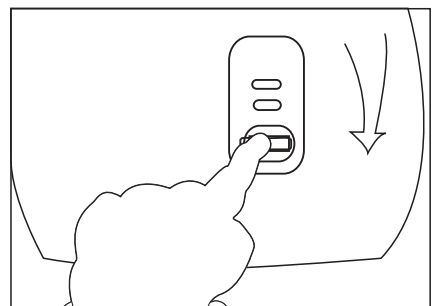


RICE COOKING PROCEDURE


5. When the cooking is finished, the "Cooking" switch will pop up and a click will be heard. At the same time, the cook light will go out and the Warm light will go on.

. After the cooking cycle ends, keep the lid closed for about 15 minutes. The rice can be cooked and vapored completely, it will be more fluffy and tasty.

 
. After the rice is steamed, be sure to open the outer lid and to stir the rice well, the cooked rice is to be served immediately or to be kept warm automatically.

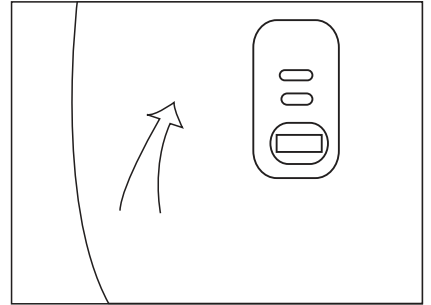

 6. Unplug the cord before serving.

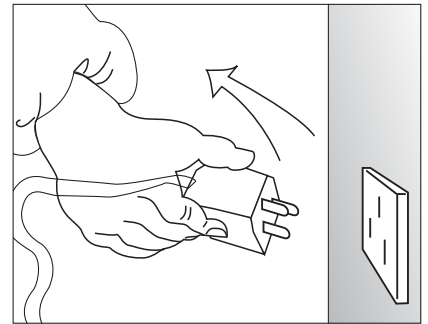

 7. Only use the spoon supplied with this cooker. Do not use a metal scoop so as to avoid scratching the non-stick coating.

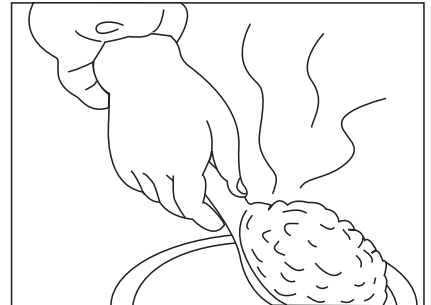

CARE AND MAINTENANCE

1. Unplug the appliance from the mains
2. Allow the appliance and inner pot to cool before cleaning.
3. Wash the Cooking Pot in warm and soapy water using a sponge or cloth and rinse with water properly, then wipe dry with cloth. Do not clean with abrasive brushes to avoid damaging the non-stick coating.
4. Residual food can be removed with a rubber spatula, a cleaning sponge or a cloth. Soak stubborn food deposits in warm soapy water before cleaning.
5. Wipe the body of the rice cooker with a damp cloth. Dry thoroughly.
6. Store the assembled cooker away from sources of heat and moisture and out of the reach of children and pets.

12 Month Warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at Kmart.com.au for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.