

Please read instructions carefully. Remove all parts from the carton. Ensure you have all parts before assembling. Place all parts on a clean and flat soft surface, such as carpet or a rug to prevent them from being scratched.


Attention: Do not tighten all screws until assembly is completed.

A x 2pcs Metal Frame	
B x 2pcs Metal Wire	
C x 1pc Board	 574x231x16mm
D x 1pc Board	 574x266x16mm
E x 1pc Board	 574x301x16mm
F x 1pc Board	 574x342x16mm
G x 4pcs Screw	 M6 x 12mm
H x 1pc Screw	
I x 1pc Screw	
J x 2pcs Screw	 M4 x 16mm
K x 16pcs Screw	 M6 x 50mm
L x 1pc Hex Key	
M x 1pc Screw	 M6 x 16mm
N x 1pc Screw	 M4 x 40mm
O x 1pc Plastic Anchor	 M4 x 40mm
P x 1pc Nylon Tie	 30 x 180mm

Step 1: Put metal frame (Part A) on the ground, oblique side upwards.


Step 2: Fasten metal frame (Part A) and each board together with screws (Part K).

Note: When assembling Part A, ensure the side with the two screw holes is at the back of the shelf.

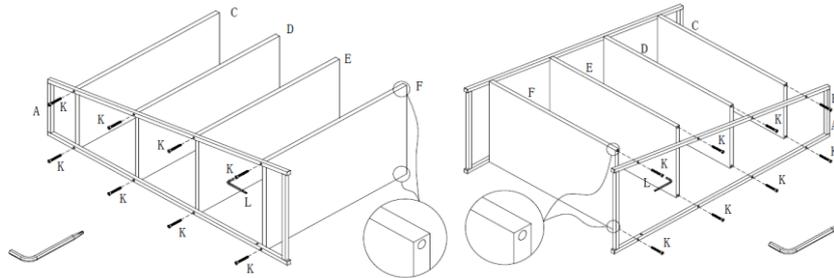


Step 3: After fastening the 2x metal frame pieces to the 4x board pieces, straighten the bookshelf.


Step 4: Overlap the metal wire pieces (Part B) to form a cross, using screw Part G to fix it to the metal frame. Put screw (Part M) into the big hole of nylon tie (Part P). Secure Part P on Part B with screws Part M, I & H. (as per below diagram)

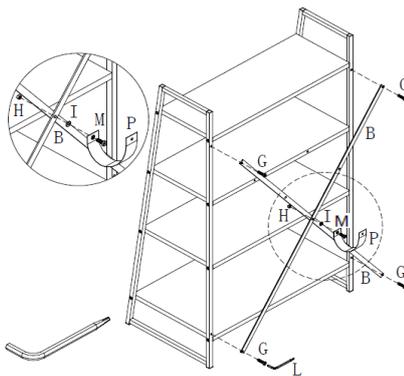

Step 5: Fasten the metal wire (Part B) and Board (Part D) with screws (part J).

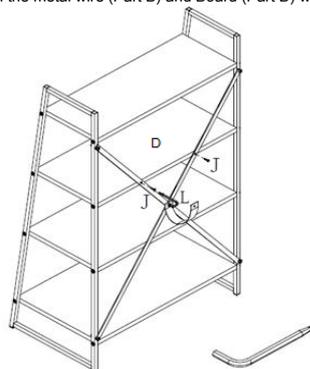

Step 6: Put screw (Part N) into the small hole of nylon tie (Part P) and across plastic anchor (Part O) to fasten to the wall. Fasten all screws firmly, assembly is now complete.

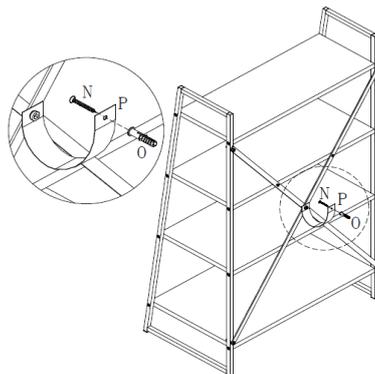

CARE INSTRUCTIONS:

WIPE CLEAN WITH A DAMP CLOTH OR DRY CLOTH.
DO NOT USE ABRASIVE MATERIALS AND SOLVENTS.
KEEP AWAY FROM WATER AND DIRECT SUNLIGHT.
FOR INDOOR USE ONLY.

WARNING!

- Do not stand or sit on this Bookshelf.
 - Do not use bookshelf as a step ladder.
 - Do not knock or drag the product.
 - Do not use the bookshelf unless all bolts, screws and knobs are firmly secured.
 - Do not place hot items directly on the shelf.
 - Maximum safe load 5KGS for each shelf.
- Failure to follow these warnings could result in serious injury.

- It is strongly recommended that this product is permanently fixed to the wall.
- Please seek professional advice if you are in doubt of what fixing device to use.
- Regularly check that anchors are securely maintained.
- Use safety drawer locks to prevent children climbing.
- Stability of tall items may be affected by thick pile carpet or uneven floors.
- Do not place unanchored televisions on furniture.

Caution: (for your safety when attaching the anchor fixings, please note the following):

- Check any electrical wires or plumbing inside the wall before drilling any holes (if you are unsure please seek professional advice from a qualified tradesperson)