12 Month Warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for
the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this productif it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at Kmart.com.au for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

home &CO

Cordless Water Kettle

LD-K1055

User Manual

PLEASE READ AND SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE

Parts Description

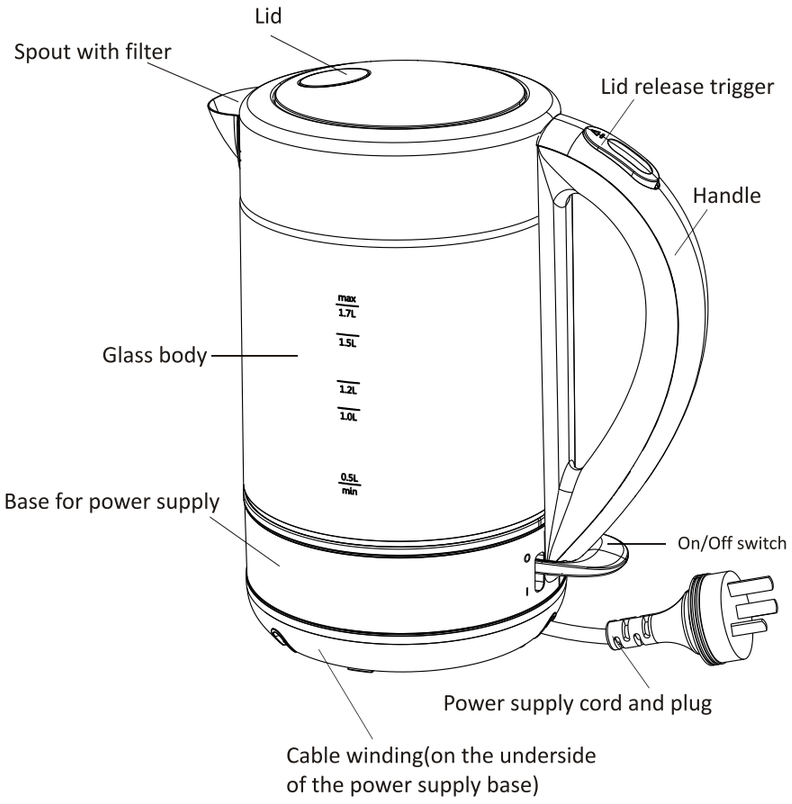

-Technical Data-

Electrical Parameter：

Model: LD-K1055
Voltage： 220-240V~
Frequency： 50/60Hz
Wattage： 1850-2200W
Capacity： 1.7 L

* Do not fill the container with less than (0.5L) or more than (1.7 L) of water. If there is not enough water in the kettle, the appliance may overheat. If too much water is filled, the boiling water may splash out.
* Be sure that the kettle is switched off before taking it off the power base.
* If the kettle is overfilled, boiling water may be ejected and caused scalding.
* The kettle is only to be used with the stand provided.
* **CAUTION!** Do not operate the kettle on an inclined plane. Do not operate the kettle unless the element is fully immersed. Do not move while the kettle is switched ON.
* **CAUTION!** To prevent damage to the appliance, do not use alkaline cleaning agents when cleaning outside surface, use a soft cloth and a mild detergent.
* **CAUTION!** Position the lid so that steam is directed away from the handle.
* **WARNING**! Avoid spillage on the electrical connector.
* **WARNING!** Misuse may cause injury.
* **WARNING!** The kettle glass surface is subject to residual heat after use.
* **WARNING!** Do not open the lid while the water is boiling.

CAUTION - Material damage

* Take care that any steam escaping from the appliance cannot damage wall paper, wall cabinets or other items. Turn the spout away from furniture and walls.
* Do not use caustic, aggressive or abrasive cleaning products for cleaning. Keep hard items away from the appliance.
* Although the kettle is protected from boiling dry, it must never be operated without water.
* If the cut-out switch switches OFF the kettle to prevent overheating and boiling dry, proceed as follows:

- Remove the kettle from the base.
- Allow the kettle to cool down for at least 15 minutes before refilling it with cold water or replacing the kettle on its base.

* Only use the kettle with the power base provided.
* Furniture today is often coated with a wide range of varnishes and plastics and is treated with various care substances. Some of these products may contain substances that react adversely with the rubber feet on the kettle base and soften them. Therefore, we recommend placing a non-slip mat under the kettle base (rubber feet).

DANGER due to electricity

* The base, plug and mains cord must not come into contact with water or other liquids. This could result in the risk of electric shock. You should therefore not, for example, place the kettle near a sink. Do not use the kettle outdoors.
* The kettle must never be immersed in water or other liquids. Water must not be allowed to come into contact with the electric parts from underneath.
* Do not use the appliance when your hands are wet.
* The kettle must only be connected to a properly installed and earthed wall power socket with mains voltagethat matches the "Technical specifications" of the appliance.
* Never leave the appliance unattended while in use.
* Keep the appliance and mains cord away from sources of heat such as cooking plates or open gas flames.

This could cause melting. Keep the mains cord away from sharp work surface edges.

* Unplug the kettle,**...**

⋯ if a disturbance occurs,

⋯ if you are not going to use it for a prolonged period of time,

⋯ during thunderstorms and

... before cleaning it.

To do so, always pull on the cord plug, not the mains cord.

* Do not use if the kettle, base or mains power cord show any visible sign of damage.
* Do not make any modifications to the appliance and its mains cord or change the connection cable yourself.
* If the supply cord is damaged, it must be replaced by a qualified electrical person in order to avoid a hazard, or the product must be disposed.

Warning - Risk of burns / scalding

* Always stand the water kettle on a solid and even surface. Ensure that it cannot slip or be dropped and that the power cord does not hang down.
* The kettle becomes hot while in use. Do not move the kettle during operation and do not pull on the mains cord. Only hold the hot kettle by its handle.
* Contact with rising steam can cause scalding! Make sure the lid is always firmly closed and do not open it while water is boiling or while pouring water out.

Unpacking

DANGER to children - danger to life due to suffocation/swallowing.
Keep the packing material out of children's reach. Dispose of it immediately.

* Carefully remove all parts from the packaging and check that no parts are missing or possibly damaged.
* Remove all packaging material.

First time use

To ensure a long service life of the water kettle, proceed as follows before using it for the first time:

1. Fill the kettle with water and add vinegar in a ratio of 1:3 (1part vinegar / 3 parts water).
2. Bring to a boil (see Boiling water), then pour away.
3. Allow the kettle to cool down and then refill it fresh water, boil the water and then discard the water from the kettle.

To avoid scale deposits, we recommend to descale the water kettle at regularly (every week) as described in the section "Descaling".

Boiling water

WARNING! risk of fire and burns:

* The kettle and its lid become hot while in use. Do not touch.
* The lid must be tightly closed during the boiling process. It must not be opened while pouring out water. Allow the kettle to cool down before opening the lid.

CAUTION To prevent damage to the kettle and/or injury from hot water,

* Do not fill the water container with less than (0.5L) or more than (1.7L) of water.

This appliance is intended to heat water only. Do not use to heat other liquids.

1. Press the lid release trigger. The lid opens automatically.
2. Fill the kettle with the amount of water required.
3. Press the lid front location down firmly to close it.

Make sure that the lid is tightly closed during use.
Otherwise the water kettle may not switch OFF automatically after boiling.

4. Fully unwind the power cord and run it through the cable guide channel.
5. Plug the mains cable into an earthed power outlet socket that is within easy reach.
6. Place the kettle on the base.
7. Set the On/ Off switch to On.
   The control blue lamp lights up to indicate that the kettle is switched ON.
   When the water is boiling, the kettle switches off automatically and the control blue lamp will go out.
8. If you wish to stop heating the water before it boils, set the On/Off switch to Off.

WARNING! Boiling water Risk of burns.

* Be sure that the water kettle is switched off before taking it off the power base.

9. After the water has come to a boil, wait a moment, until the water has stopped simmering.Remove the kettle from the water base.
10. Pour the water out slowly to avoid splashing. Do not open the lid while pouring out the water.

* The sieve insert in the spout prevents any larger particles of scale being poured out.
* Do not re-boil stale water. Discard and always use fresh tap water when boiling.

-Cleaning And Care-

DANGER risk of fatal electric shock

* Remove the mains plug from the wall socket before cleaning the kettle.
* The power base, plug and mains cord must not come into contact with water or other liquids.
* The kettle must not be immersed in water or liquid.
* The product and its parts must not be cleaned in the dishwasher.

CAUTION- material damage

* Do not use caustic, aggressive or abrasive cleaning products for cleaning.
* Do not use alkaline cleaning agents when cleaning, use a soft cloth and a mild detergent.

Cleaning

1. Remove the mains plug from the socket and let the water kettle cool off fully.
2. Wipe off the base and power cord with a dry cloth.
3. Wipe the outside of the jug with a slightly moistened cloth.
4. Pull the filter out of the spout for cleaning (if required).
5. Rinse it off under running hot water.

Decalcification

The kettle must be descaled at regular intervals, especially if the base of the kettle is visibly discolored with lime scale. Regular descaling saves energy and increases the service life of the kettle. We recommend using a three-to-one solution of water and vinegar, or water and citric acid to descale the kettle.

1. Let the solution soak in the kettle for about an hour and then bring it to the boil.
2. Thoroughly rinse out the kettle with fresh water.
3. Alternatively you may use a commercially available kettle cleaning solution to clean the kettle. Always follow the instructions provided with the product.

-Important Safety Instructions-

Intended use

* The kettle is intended solely for boiling water. Heating of milk, carbonated drinks or other liquids will cause malfunction or damage the appliance.
* The appliance is intended for household use and is not suitable for commercial purposes.

DANGER to children and infirm persons

* This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
* Children should be supervised to ensure that they do not play with the appliance.
* Keep packing material out of children's reach. There is a risk of suffocation!